

## Ceramic Pulley Installation Guide.

We recommend all installations be done by a qualified bicycle mechanic. Warranties can be voided if installation was not performed by a qualified bicycle mechanic.


We recommend following the instructions from the manufacturer of your rear derailleur for setting cable tension, b-tension and limit screws. This information can be obtained from the manufacturer of your rear derailleur.

Included with your ceramic pulleys are 4 sets of spacers (4 spacers for each set). These spacers allow the use of the pulleys with a wide variety of rear derailleurs.

The breakdown of spacer compatibility is:

- A: Shimano 8,9 & 10 Speed, SRAM Road 10 Speed
- B: Shimano 7 & Campy 8 Speed
- C: Campy 9 & 10 Speed
- D: SRAM 9.0, 9.0SL & 7.0

The spacers should be mounted on each side of the pulley, as pictured below.

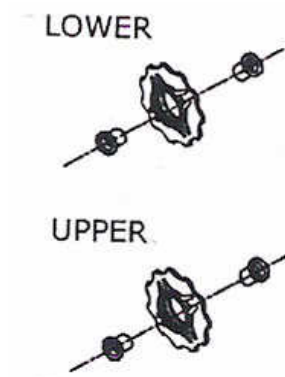

Pulleys should be mounted with the original allen bolts that came with your rear derailleur.

It is advised to do a full re-adjust of your rear derailleur when installing our pulleys. This includes cable tension, b-tension and limit screws.

**IMPROPERLY ADJUSTED REAR DERAILLEURS CAN CAUSE SIGNIFICANT DAMAGE TO YOUR BIKE, REAR DERAILLEUR AND REAR WHEEL BY THROWING THE CHAIN INTO THE SPOKES OR INTO THE FRAME.**

**WE HIGHLY RECOMMEND A QUALIFIED BICYCLE MECHANIC PERFORM ALL INSTALLATIONS.**